SANYO

Remote Control Color Television

Model 31C435

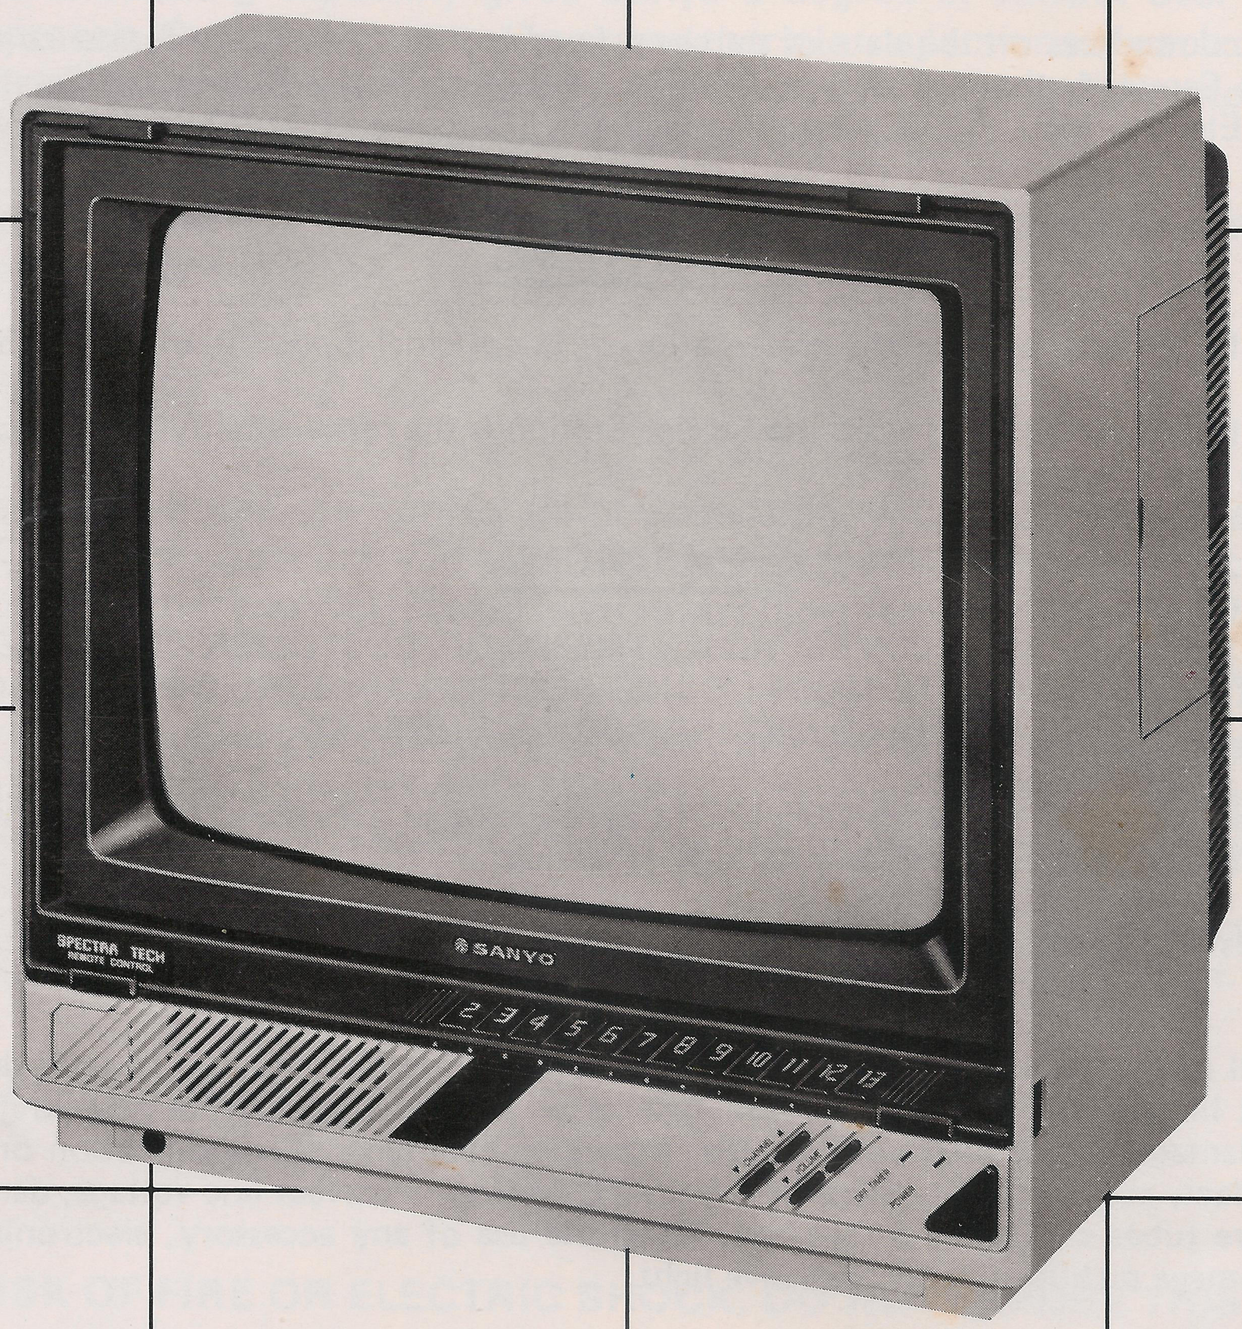

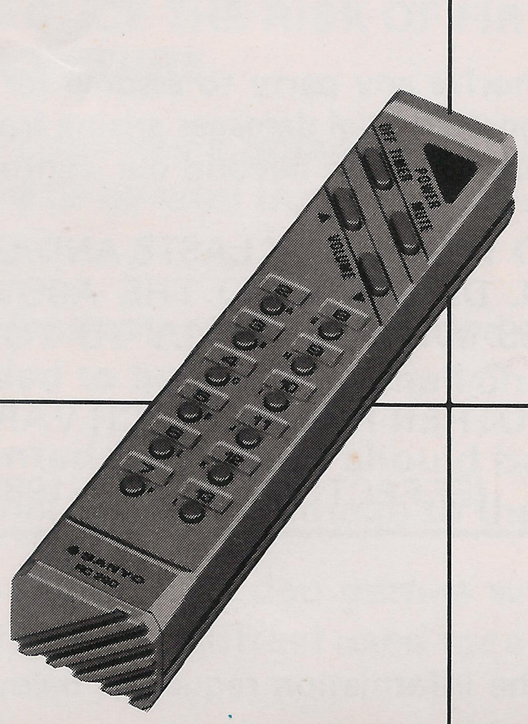

Owner's Manual

SANYO

LIMITED WARRANTY

THIS WARRANTY IS VALID ONLY ON SANYO PRODUCTS PURCHASED AND USED IN THE UNITED STATES OF AMERICA EXCEPT HAWAII, U.S. TERRITORIES AND PROTECTORATES. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL USER. THIS WARRANTY DOES NOT APPLY TO PRODUCT IN USE FOR INDUSTRIAL, RENTAL OR COMMERCIAL PURPOSES.

Subject to OBLIGATIONS and EXCLUSIONS found below, this Sanyo product is warranted against manufacturing defects in material and workmanship for the period of Parts + Labor specified and Sanyo will repair or replace (at our option) any parts found to be defective. For the period specified under parts, Sanyo will provide a replacement for any defective parts.

PARTS LABOR	PARTS		IN HOME SERVICE
	PARTS ONLY	PICTURE/PROJECTION/ IMAGE PICKUP TUBE	
2 YEARS	2 YEARS	2 YEARS	NONE

Each warranty period commences on the date of purchase by the original user. Performance under this warranty must be obtained at a Sanyo Authorized Service Station. A list of Sanyo Authorized Service Stations may be obtained from Sanyo Electric Inc., 1200 West Artesia Blvd., Compton, CA 90220, ATTN: Warranty Service, (213/ 537-5830).

OBLIGATIONS

1. This warranty will be honored only on the presentation of the original dated Bill of Sale or Sales Slip.
2. Transportation of the product to and from the Service Station is the responsibility of the user unless specifically stated otherwise in this warranty.

EXCLUSIONS

1. THIS WARRANTY SHALL NOT COVER ADJUSTMENT OF CUSTOMER OPERATED CONTROLS AS EXPLAINED IN THE APPROPRIATE MODEL'S INSTRUCTION MANUAL OR PRODUCTS WHICH HAVE BEEN ALTERED, REPLACED OR HAVE MISSING SERIAL NUMBERS.
2. This warranty shall not apply to the antenna nor to appearance or accessory items including, but not limited to cabinets, cabinet parts, knobs, batteries, cartridges or stylus.
3. This warranty does not apply to uncrating, setup, installation, or the removal and reinstallation of products for repair.
4. This warranty shall not apply to repairs or replacements necessitated by any case beyond the control of Sanyo, including, but not limited to, any malfunction, defects or failure caused by or resulting from unauthorized service or parts, damaged or broken video heads, improper maintenance, modification or repair by the user, abuse, misuse, neglect, accident, fire, flood or other Acts of God, incorrect line voltage, damage or image burns to television picture tubes caused by or attributable to the use of any accessory, electronics game or device or damage caused to image pickup tube by excessive light.

The foregoing is in lieu of all other expressed warranties and Sanyo does not authorize any party to assume for it any other obligation or liability. In no event shall Sanyo be liable for special or consequential damages arising from the use of this product, or for any delay in the performance of this warranty due to causes beyond our control.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS ON IMPLIED WARRANTY AND CONSEQUENTIAL DAMAGES MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

(EFFECTIVE: April 15, 1982)

ATTENTION

For your protection in the event of theft or loss of this product, please fill in the information requested below which is for your own personal records.

Model No. _____
Serial No. _____
(Located on back or bottom side of unit)

Date of Purchase _____
Purchase Price _____
Where Purchased _____

Welcome to the World of Sanyo

SANYO — "THAT'S LIFE"

"That's Life" is more than just a slogan at Sanyo. It symbolizes a commitment to researching, designing and building products that fit the way people live today — products that deliver more than their money's worth, and keep on delivering.

This philosophy has helped Sanyo grow to be one of the largest consumer electronics companies in the world, with 23 manufacturing plants and over 37,000 employees the world over, producing everything from televisions to audio components to portable radios, and tape recorders to home appliances.

Unlike other electronics manufacturers, Sanyo does not just assemble parts made by others and put our name on them. Instead, almost every component that goes into any Sanyo product is manufactured by Sanyo. That includes transistors, integrated circuits, capacitors and precision tape transport mechanisms.

This "integrated" manufacturing capability gives Sanyo a degree of control over our products that most companies cannot approach. Our quality control begins with triple inspections of each component part. Then we give even more rigid tests to each finished product — including a 24 hour operating test for color televisions to make sure that nothing goes wrong after the product leaves the factory.

"Products that please people" is what Sanyo is all about—with performance, features, styling and reliability. That's Sanyo. That's life.

TO THE OWNER

As the owner of a new Sanyo Remote Control Color Television, you are probably eager to try out your new television. Before you do, we suggest that you spend a little time reading this manual to familiarize yourself with the operating procedures, so that you will receive maximum enjoyment from the many features included on your new set.

This owner's manual is to acquaint you with your TV's features. Reading it will help us, too. Through the years, we have found that many service requests were not caused by problems with our televisions. They were caused by problems that could have been prevented, if the owner had followed the instructions in the manual.

You can often correct operating problems yourself. If your television fails to work properly, locate the operating problem in the Troubleshooting Chart and try the solutions marked for each problem.

SAFETY PRECAUTIONS

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

The TV set has a polarized AC line plug with one blade of the plug wider than the other. This is a safety feature to be sure that the plug will fit into the power outlet only one way. Do not try to defeat this safety feature.

A small adapter tool is included with this television to aid in changing the channel bands. This adapter is not intended to be used by small children because it is small and may be swallowed.

The tinted front glass should be handled with care, when cleaning or removing it, to reduce the risk of personal injury or damage to the TV.

When using TV video games with this TV, do not use too much brightness and/or contrast. Too much brightness or contrast used for a long time may permanently put an image of the playing field on the picture tube.

READ AND KEEP THIS OWNER'S MANUAL AND THE SAFETY TIPS PAMPHLET INCLUDED WITH THIS TV.

UNPACKING THE TELEVISION

Your new color television is a precise piece of electronic equipment which should be treated gently. Carefully remove the television from its shipping carton and save the carton until you are sure the television has not been damaged. Report any damage to the store from which you purchased your TV.

The envelope which contained this manual also contains a safety tips pamphlet and a Channel Number Tab Sheet. Be sure to remove the box containing the remote control transmitter from the back of the TV.

POSITIONING THE TELEVISION

Put your TV where direct light from lamps or windows does not fall directly on the screen. Soft, indirect room lighting is best. Viewing in a room that is too bright or too dark can cause eye strain. A comfortable viewing distance, usually six feet or more from the TV, is recommended.

Do not place your television too close to the wall or in a confined area. The electronic parts need normal air circulation for reliable, long life. You should also avoid locating your TV in excessively warm areas in order to prevent premature component failure.

TINTED FRONT GLASS

A tinted front glass is provided on this television to reduce glare and to improve contrast. To maintain good contrast and a bright picture, the glass must be cleaned periodically as well as the face of the picture tube.

Clean the glass and the face of the tube with a soft cloth dampened with a solution of mild detergent and warm water. Wipe dry and clean up any spills.

CAUTION: The tinted front glass should be handled with care, when cleaning or removing it, to reduce the risk of personal injury or damage to the television.

To remove the tinted glass:

- Slide one of the top holders to the right to release the holder, then remove the holder by rotating it counterclockwise out of the slot.
- While holding the glass in place with one hand, remove the other top holder in the same manner.
- Carefully tilt the glass forward and lift the glass out of the bottom holders.

To reinstall the tinted glass:

- Carefully set the glass into the bottom holders.
- While holding the glass in place with one hand, reinsert the holders into the slots at the top. (See the illustration at right.)
- Relock the holders in place by sliding them to the left.

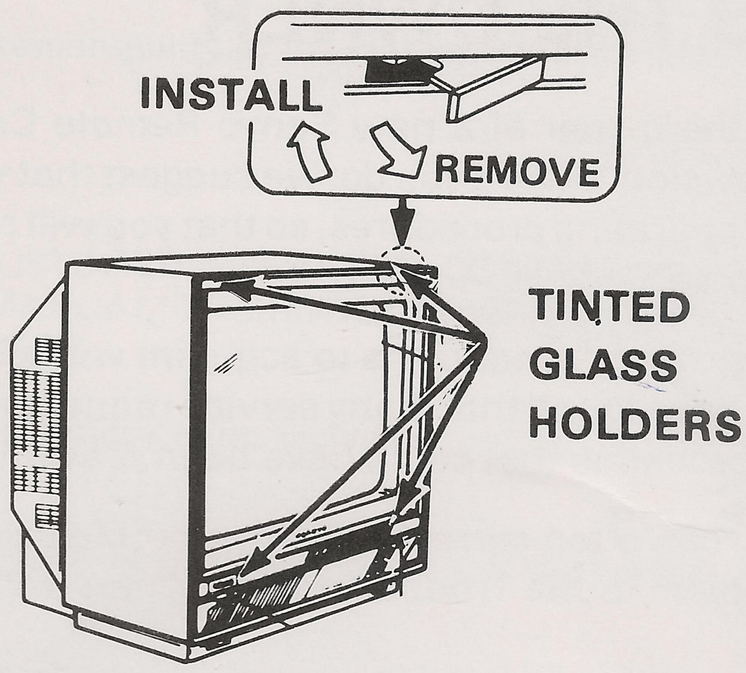

CONNECTING THE POWER

Plug the power cord into an easy-to-reach wall outlet that has standard house power (120 volts AC, 60 Hz.). As a safety feature, the plug has one prong wider than the other. It will fit only one way into a standard electrical outlet. If the plug will not fit into the outlet, try turning it around. **Do not defeat the safety feature of the plug.**

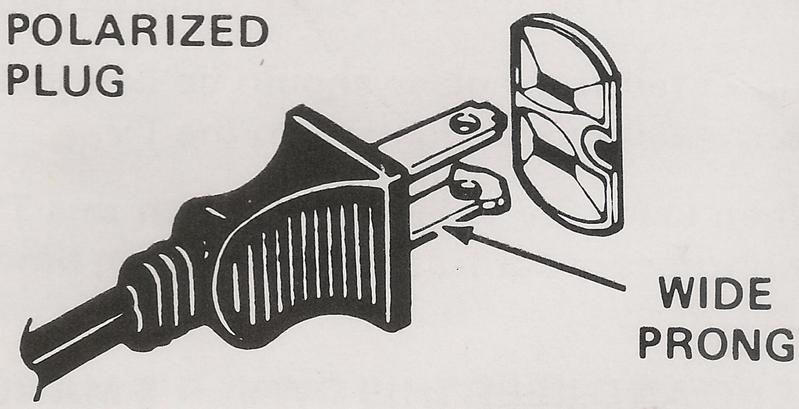

CONNECTING THE ANTENNAS

The best possible picture on this television receiver depends to a great degree upon an antenna that delivers the signal to your TV. In most metropolitan TV signal areas, the VHF telescoping antenna and the UHF loop antenna supplied with the TV set are adequate, but a properly installed outdoor TV antenna assures you of the best possible picture in your reception area. Your local Sanyo dealer can inform you of the best outdoor antenna for your area. If you intend to use a previously installed outdoor antenna, we strongly urge that you either inspect your antenna or have it inspected for the weathering effects of wind, snow, ice and corrosion that greatly reduce the efficiency of the antenna and twin-lead wire. When an outdoor antenna is used, disconnect any indoor antennas before connecting the outdoor antenna. If CATV (Cable TV) is available in your area, pull back on the 75 Ohm connector, rotate it and insert the connector into the storage hole. Then connect the coaxial cable (75 Ohm) from your Cable System to the 75 Ohm terminal. If you are not on a CATV (Cable) System, the 75 Ohm connector on the terminal board should remain connected.

INSTALLING THE INDOOR ANTENNAS— VHF AND UHF

Telescoping antenna for VHF . . . refer to Fig. 1.

1. Mount the base of the telescoping antenna by sliding the antenna base into the indented channel on the top left side of the cabinet back.

2. Loosen the two screws on the VHF antenna terminal board on the back of the TV. Connect the two wires from the telescoping antenna to the VHF connectors and tighten securely.

Loop antenna for UHF . . . refer to Fig. 1.

1. Loosen the two screws on the UHF antenna terminal board on the back of the TV.

2. Mount the UHF antenna as shown in Figure 1. Tighten the screws securely.

ADJUSTING THE POSITION OF THE ANTENNAS

Telescoping antenna for VHF . . . refer to Fig. 2.

Pull the top of the antenna rods to extend the telescoping antennas. While holding the lower section of the antenna rod, move the rod around for maximum VHF signal pickup. The swivel-hinge arrangement of the antenna will allow the antenna to be rotated freely.

Loop antenna for UHF . . . refer to Fig. 3.

Adjust position of the UHF antenna loop for best signal reception. The swivel-hinge arrangement of the antenna will allow the antenna loop to be turned or moved up, down or sideways.

Be sure the fine tuning (refer to Page 9) is properly adjusted before final adjustment of the antennas is made. Incorrect fine tuning can cause the picture to appear the same as an incorrectly adjusted antenna.

Figure 1

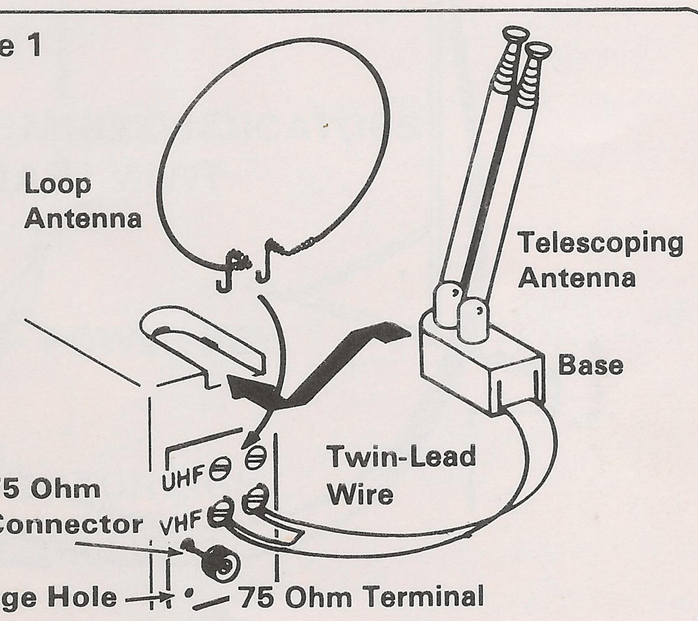

Figure 2

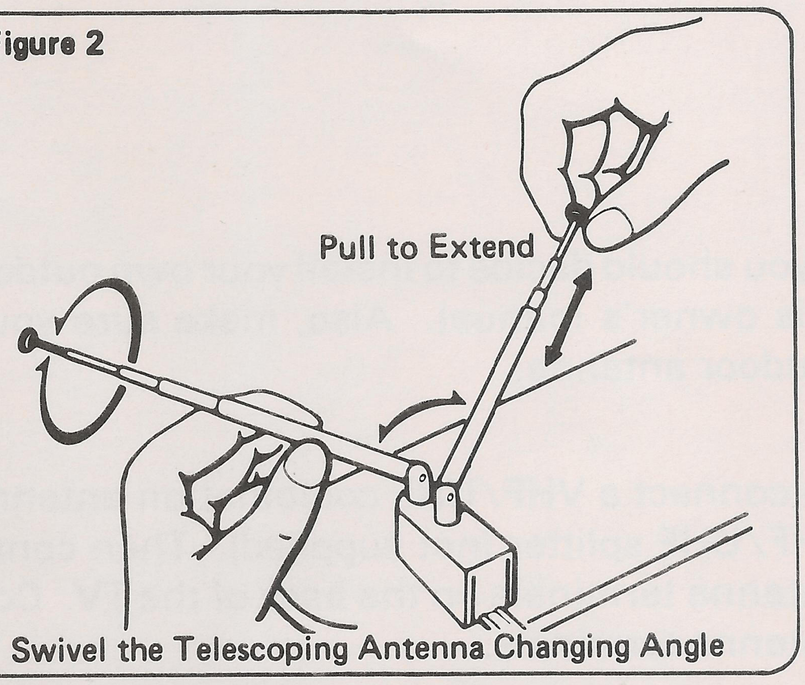

Figure 3

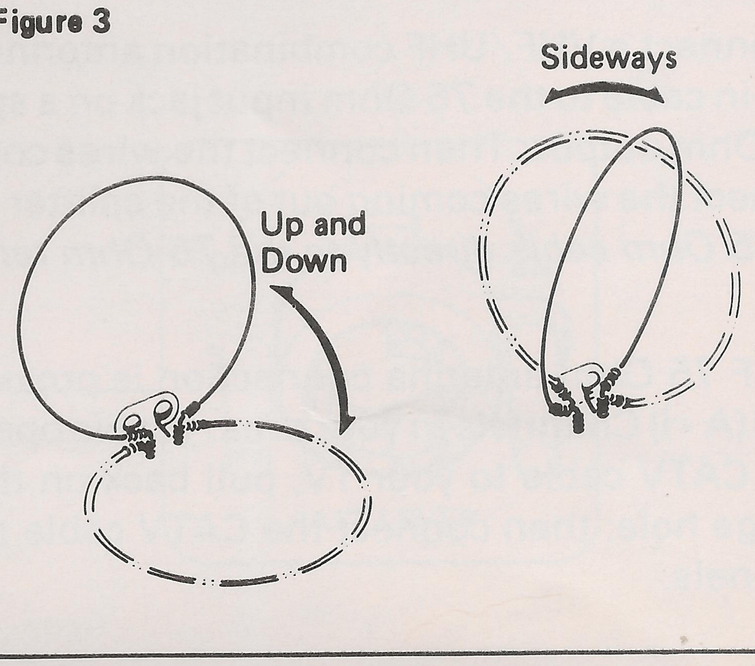

CONNECTING THE ANTENNAS

(Continued)

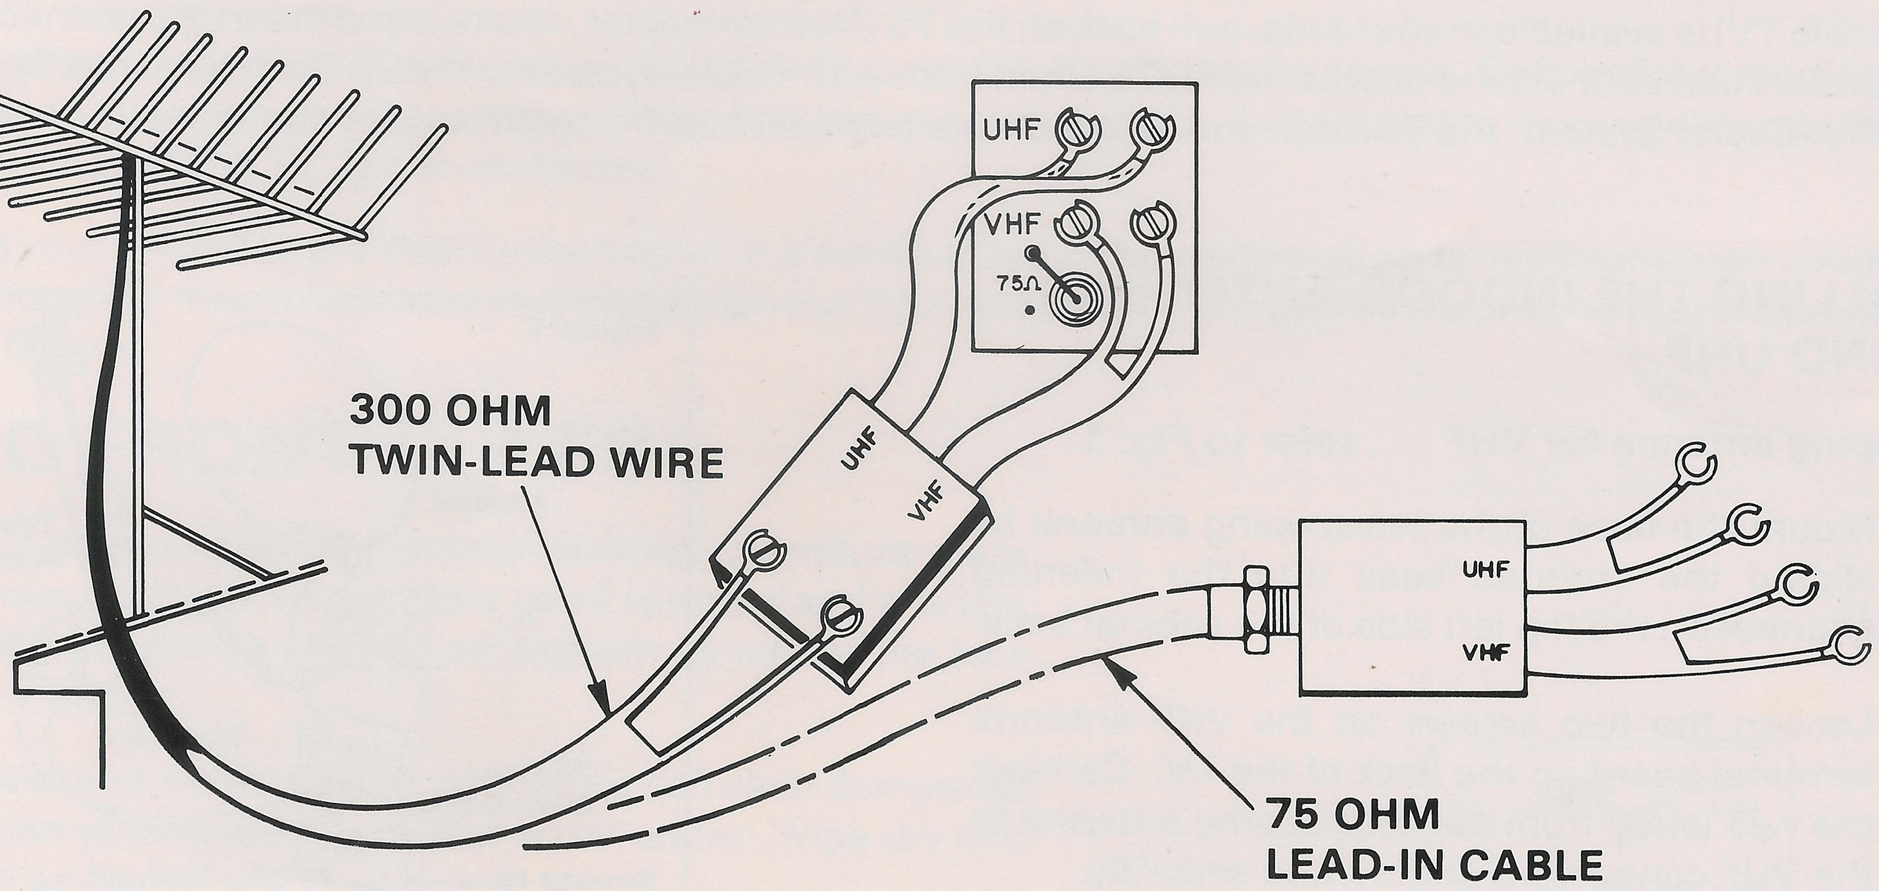

If you should decide to install your own outdoor antenna, be sure to read the Safety Tips Pamphlet included with this owner's manual. Also, make sure you have disconnected any indoor antennas before connecting the outdoor antenna.

To connect a VHF/UHF combination antenna to your TV, connect the 300 Ohm antenna twin-lead wire to a VHF/UHF splitter (not supplied). Then connect the wires coming out of the splitter marked VHF to the VHF antenna terminals on the back of the TV. Connect the wires coming out of the splitter marked UHF to the UHF antenna terminals.

To connect a VHF/UHF combination antenna that has a 75 Ohm lead-in cable to your TV, connect the 75 Ohm lead-in cable to the 75 Ohm input jack on a splitter (not supplied). This splitter must have a 75 Ohm input and a 300 Ohm output. Then connect the wires coming out of the splitter marked VHF to the VHF antenna terminals. Connect the wires coming out of the splitter marked UHF to the UHF antenna terminals. *If you should connect the 75 Ohm cable directly to the 75 Ohm terminal on the TV, you will not be able to receive the UHF signal.*

A VHF 75 Ohm antenna connection is provided for Cable Television Channels 2 through 13 and also for Mid Band (A - I) Channels in your area. (Cable operation will be discussed in more detail on Page 8.) To connect your local CATV cable to your TV, pull back on the 75 Ohm connector, rotate it and insert the connector into the storage hole; then connect the CATV cable to the 75 Ohm jack to receive VHF Channels 2 - 13 and the CATV Channels.

UNIT CONTROLS

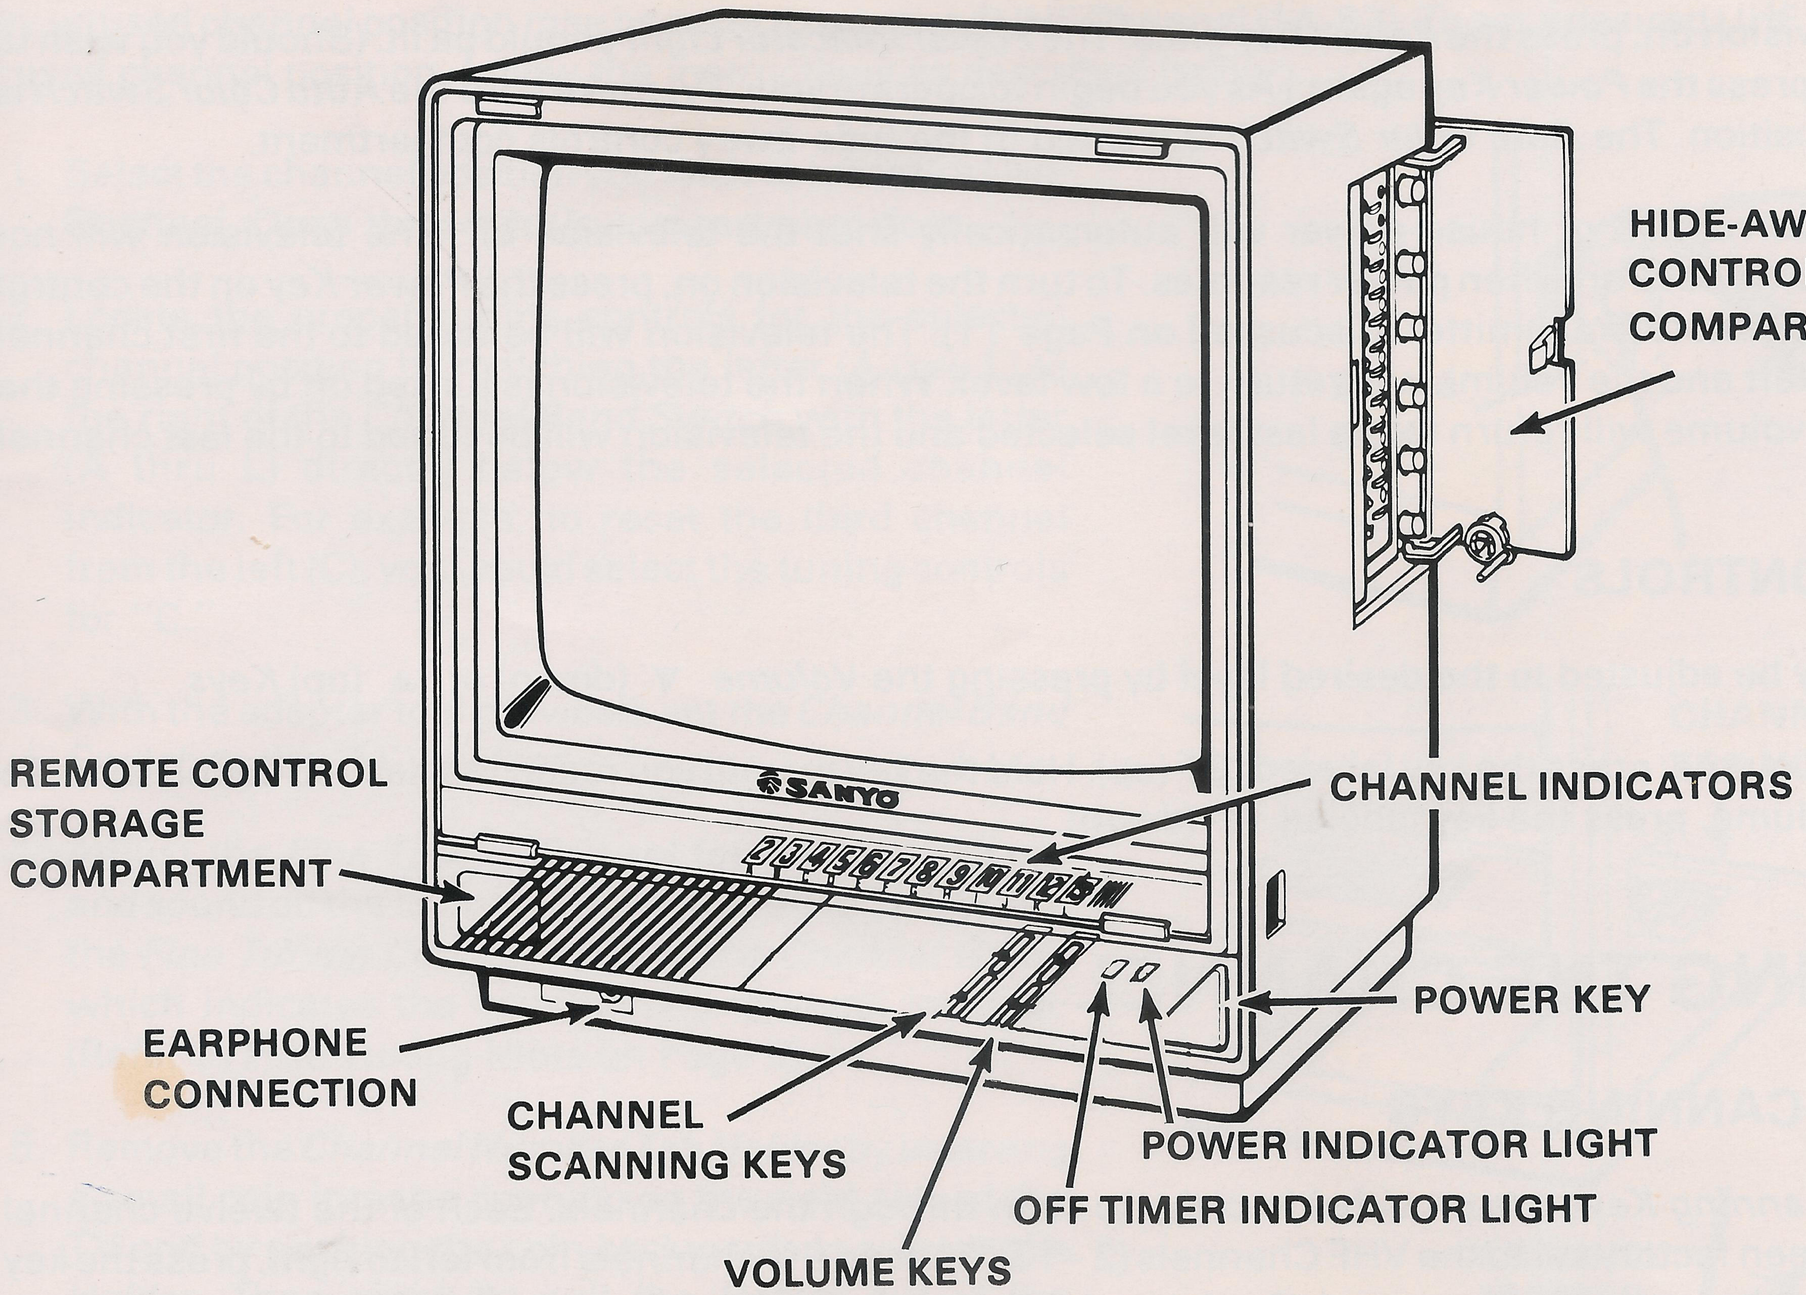

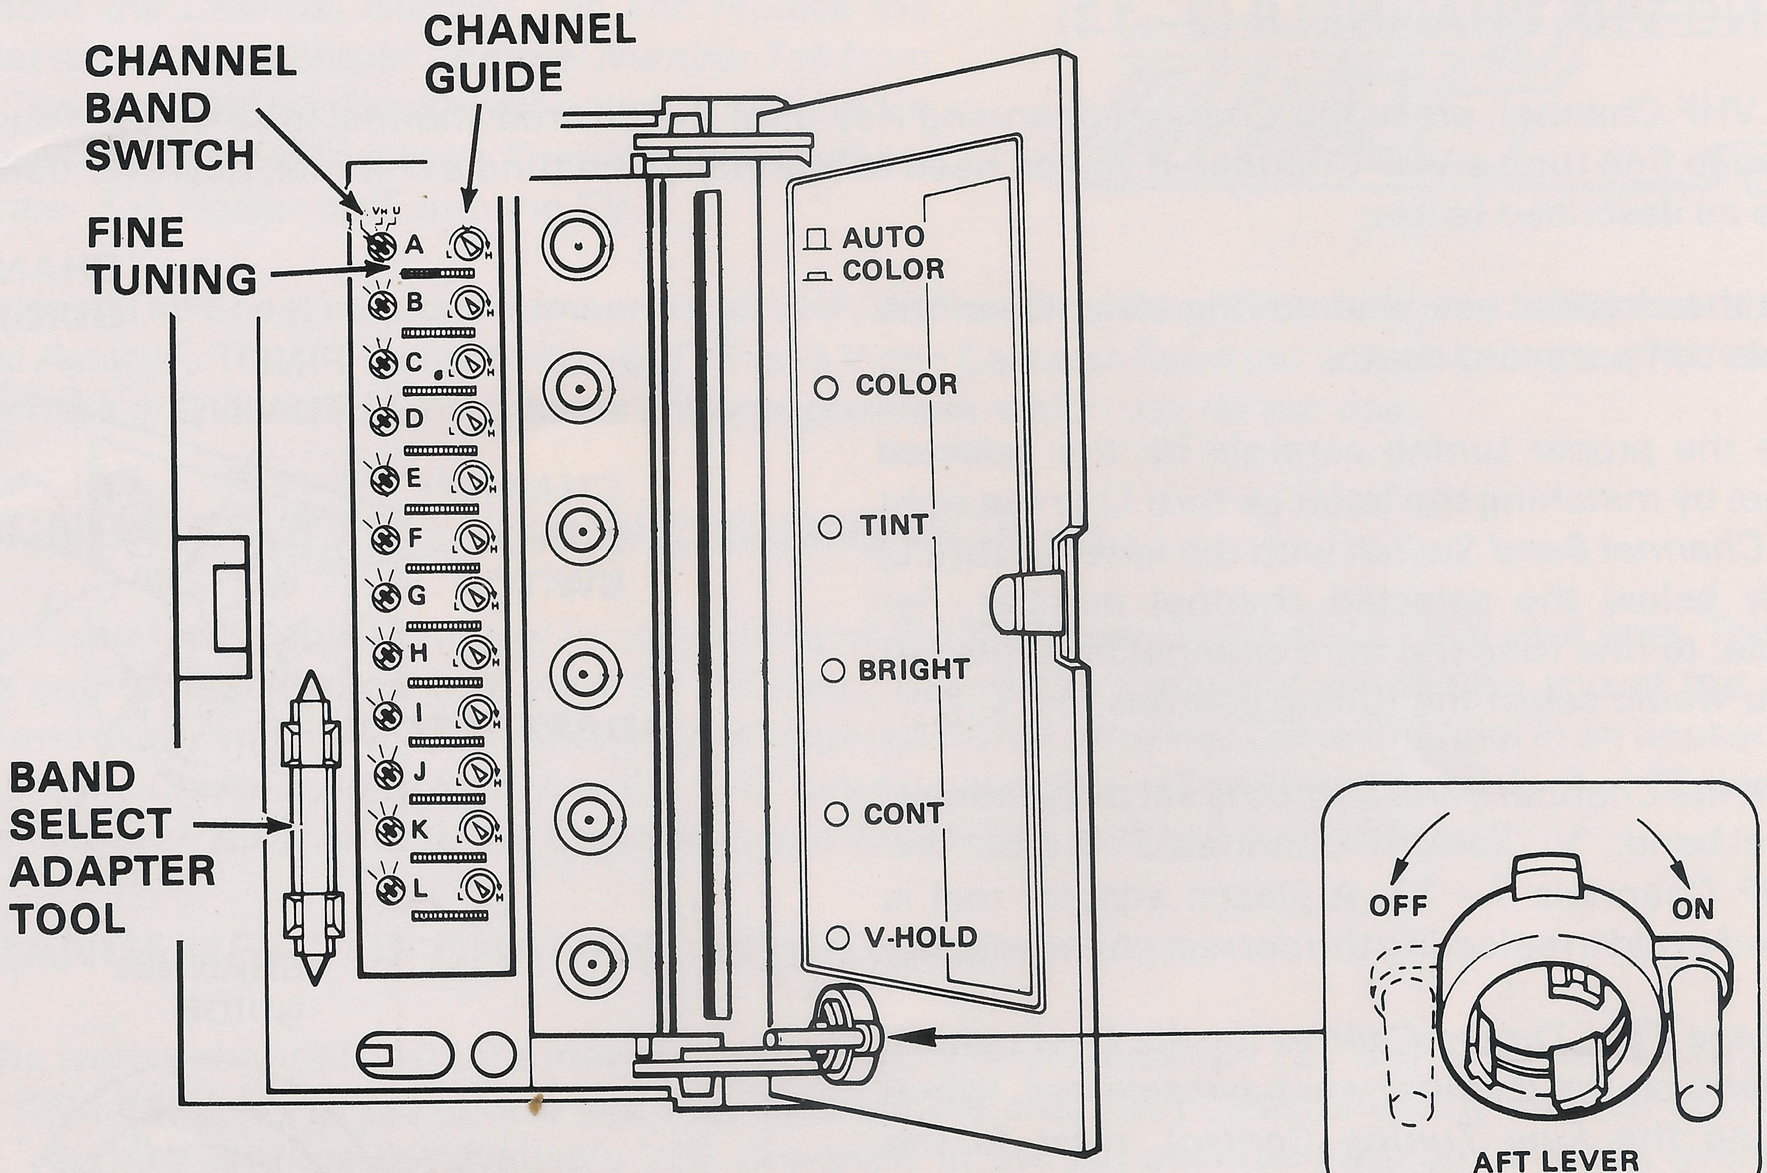

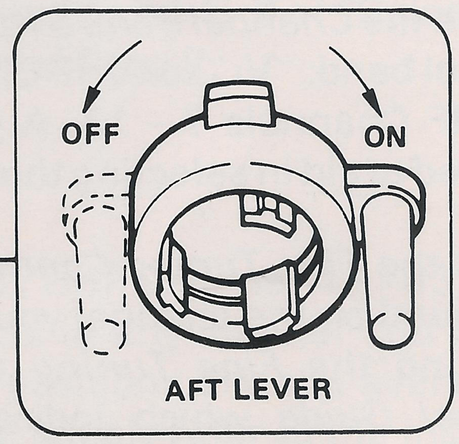

OPERATING THE TELEVISION

To turn the television on, press the *Power Key* once. The *Power Indicator Light* should be lit. (Should you wish to turn the TV off, press the *Power Key* again.) As you begin to operate your TV, make sure the *Auto Color Switch* is in the On (in) position. The *Auto Color Switch* is located in the hide-away controls compartment.

NOTES: An interruption of house power will automatically shut the television off. The television will not automatically come back on when power resumes. To turn the television on, press the *Power Key* on the control panel or on the Remote Transmitter (discussed on Page 11). The television will be tuned to the first channel position on the left and the volume will return to a low level. When the television is turned off by pressing the *Power Key*, the volume will return to the last level selected and the television will be tuned to the last channel selected.

VOLUME CONTROLS

The volume may be adjusted to the desired level by pressing the *Volume* ▼ (down) or ▲ (up) *Keys*.

To increase the volume; press the key labeled ▲ (up). Hold the key in until you reach the desired sound level. To decrease the volume, press the key labeled ▼ (down).

SELECTING THE CHANNEL

CHANNEL SCANNING KEYS

The *Channel Scanning Keys* are provided in order to scan through the channels. Each of the twelve channel positions have been factory set to the VHF Channels (2 - 13). To scan the channels from left to right, press the key labeled ▲ . Hold the key in until you reach the desired channel, then release the key. To scan the channels from right to left, press the key labeled ▼ . The TV will scan at an approximate rate of one channel per second.

SELECTING VHF CHANNELS (2 - 13)

To select a VHF Channel, press the *Channel Scanning Key* until the desired channel is selected. You should seldom need to fine tune a VHF Channel. If you do need to manually fine tune a channel, however, follow the instructions as described below:

1. Select the channel you wish to fine tune. Open the controls compartment door.

2. Locate the proper tuning controls for the selected channel by matching the letter (A thru L) to the right of the *Channel Band Switch* with the letter (A thru L) directly below the selected channel number. For example, to fine tune the third channel from the left (C), you would select the tuning controls for "C."

3. Be sure the *Channel Band Switch* is set to the correct channel band: "V_L" for VHF Channels 2 - 6 and "V_H" for VHF Channels 7 - 13. A plastic adapter tool is provided to aid in selecting the correct channel band.

4. Adjust the *Fine Tuning Control* for the best picture and sound on the channel you have selected. When adjusting the *Fine Tuning Control,* refer to the *Channel Guide* which indicates the approximate channel location. (Refer to Fine Tuning Hints on Page 9.)

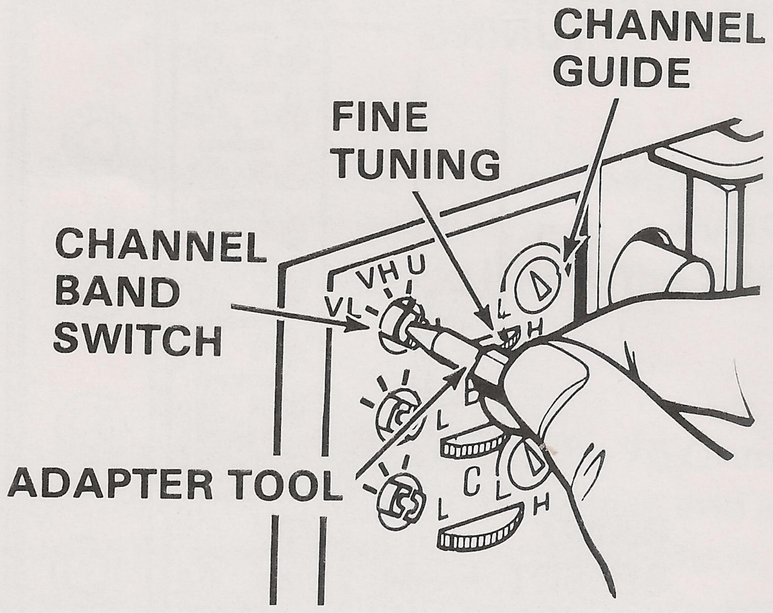

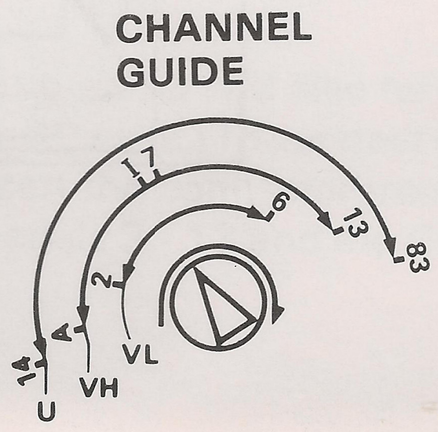

SELECTING UHF CHANNELS (14 - 83)

Any unused channel position may be reset to a desired UHF Channel (14-83). To set a desired UHF Channel in an unused channel position, follow the instructions as described below:

1. Select the channel position you wish to reset to a UHF Channel. Open the controls compartment door.

2. Locate the proper tuning controls for the selected channel position by matching the letter (A thru L) to the right of the *Channel Band Switch* with the letter (A thru L) directly below the selected channel indicator. For example, to reset the third channel from the left (C), you would select the tuning controls for "C."

3. With the adapter tool provided, set the *Channel Band Switch* to the "U" position.

4. Adjust the *Fine Tuning Control* for the best picture and sound on the channel you desire. When adjusting the *Fine Tuning Control, refer to the Channel Guide* which indicates the approximate channel location. (Refer to Fine Tuning Hints on Page 9).

5. Remove the *Channel Number Tab Holder* by inserting a small coin into the opening on the right side of the TV and by pushing the coin backwards to release the *Holder.* Then carefully pull the *Holder* out of the opening.

6. Remove the *Channel Number Tab* and replace the initial tab with the proper *Channel Number Tab* from the *Channel Number Tab Sheet** which is included in your owner's manual package. Then slide the *Channel Number Tab Holder* back into the TV.

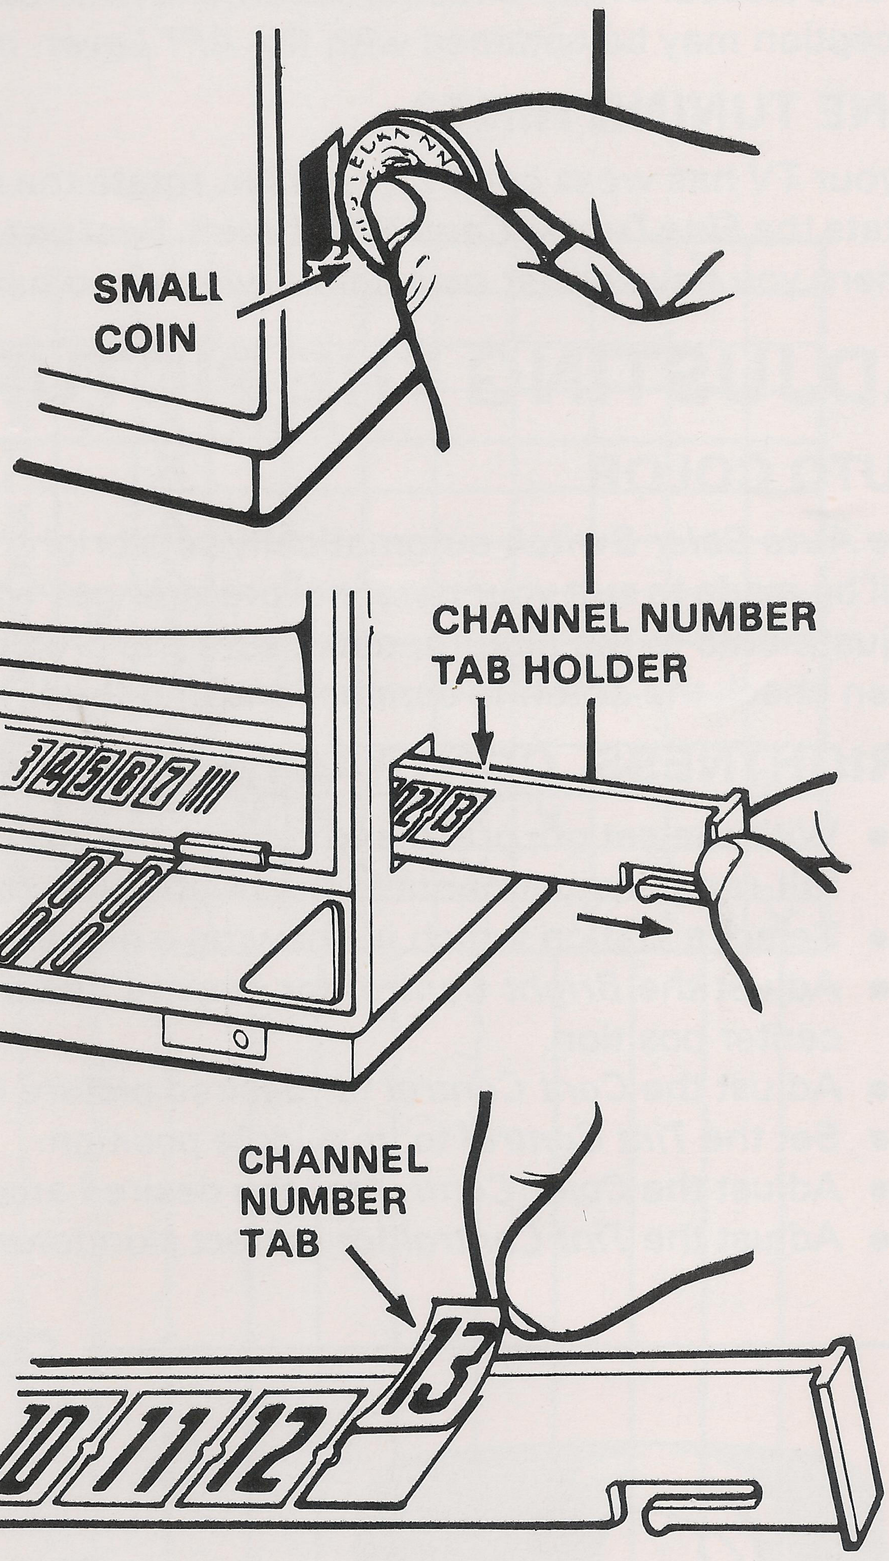

* The enclosed Tab Sheet includes numbers of all VHF, UHF and Mid Band Channels plus additional tabs such as VCR and Asterisk. The VCR tab may be used when a Video Cassette Recorder is attached to the TV receiver and the Asterisks may be used for the blank channel positions which you do not use.

SELECTING CABLE TELEVISION CHANNELS (A - I)

Check with your local Cable Company for availability of the Mid Band Channels (A - I) in your area. These Cable Channels can be received on your new TV receiver. Your Cable Company can advise you of the channels available and of any special adapters that may be required. To set a desired Cable Channel in an unused channel position, set the *Channel Band Switch* to the "VH" position and then follow Steps 2 and 4 - 6 of "Selecting UHF Channels" (above). Also, refer to the Channel Guide illustration at the bottom of Page 7.

REARRANGEMENT OF CHANNEL POSITIONS

Each of the twelve channel positions may be tuned to any VHF Channel (2 - 13), UHF Channel (14 - 83) or Cable Channel (Mid Band A - I). Therefore, you may arrange the channel positions in any manner you wish. For example, you may arrange the available VHF Channels in the left channel positions and the available UHF Channels in the right channel positions. To rearrange the channel positions, simply refer to the instructions given in Selecting VHF Channels (Page 7), Selecting UHF Channels (above) and the Channel Guide illustration (bottom of Page 7) for detailed information on tuning.

AUTOMATIC FINE TUNING (AFT)

AFT automatically maintains correct fine tuning. It is seldom necessary to manually fine tune the TV. *AFT* operates when the *AFT Lever* (located on the hide-away controls compartment door) is in the On position and the compartment door is closed. Under unusual conditions (with some Cable Systems or with an inadequate antenna), better tuning or reception may be obtained with the *AFT Lever* in the Off position.

FINE TUNING HINTS

If your TV has weak color or no color, rotate the *Fine Tuning Control* to the right. If your TV has lines in the picture, rotate the *Fine Tuning Control* to the left. Best picture reception will be obtained about halfway between the two points where you have either no color or where you have lines in your picture.

ADJUSTING THE PICTURE

AUTO COLOR

The Auto Color Switch automatically sets brightness, contrast, color and tint. Slight adjustments to the picture may still be made to suit your personal preferences with the *Auto Color Switch* in the On (in) position. Before making any adjustments to the picture, make sure the problem is not at the transmitting station by selecting another channel. Then check the antenna connections and the fine tuning of the channel you wish to receive.

BRIGHTNESS, CONTRAST, COLOR AND TINT ADJUSTMENTS

- With the set on, press and release the *Auto Color Switch* to the Off (out) position. This will allow you to make full-range adjustments to the brightness, contrast, color and tint.
- Select a station which is showing a picture with skin tones.
- Adjust the *Bright Control* for desired picture brightness. Normally, best picture brightness is obtained at the center position.
- Adjust the *Cont Control* for desired picture contrast.
- Set the *Tint Control* to its middle position.
- Adjust the *Color Control* for the desired amount of color.
- Adjust the *Tint Control* for correct skin tones.

COLOR CONTROL

If colors appear too faded, rotate the color control clockwise.

If colors appear too flushed, rotate the color control counterclockwise.

TINT CONTROL

If skin tones appear purplish, rotate the tint control clockwise.

If skin tones appear greenish, rotate the tint control counterclockwise.

TROUBLESHOOTING

Try the solutions corresponding to the symptoms.

SYMPTOMS

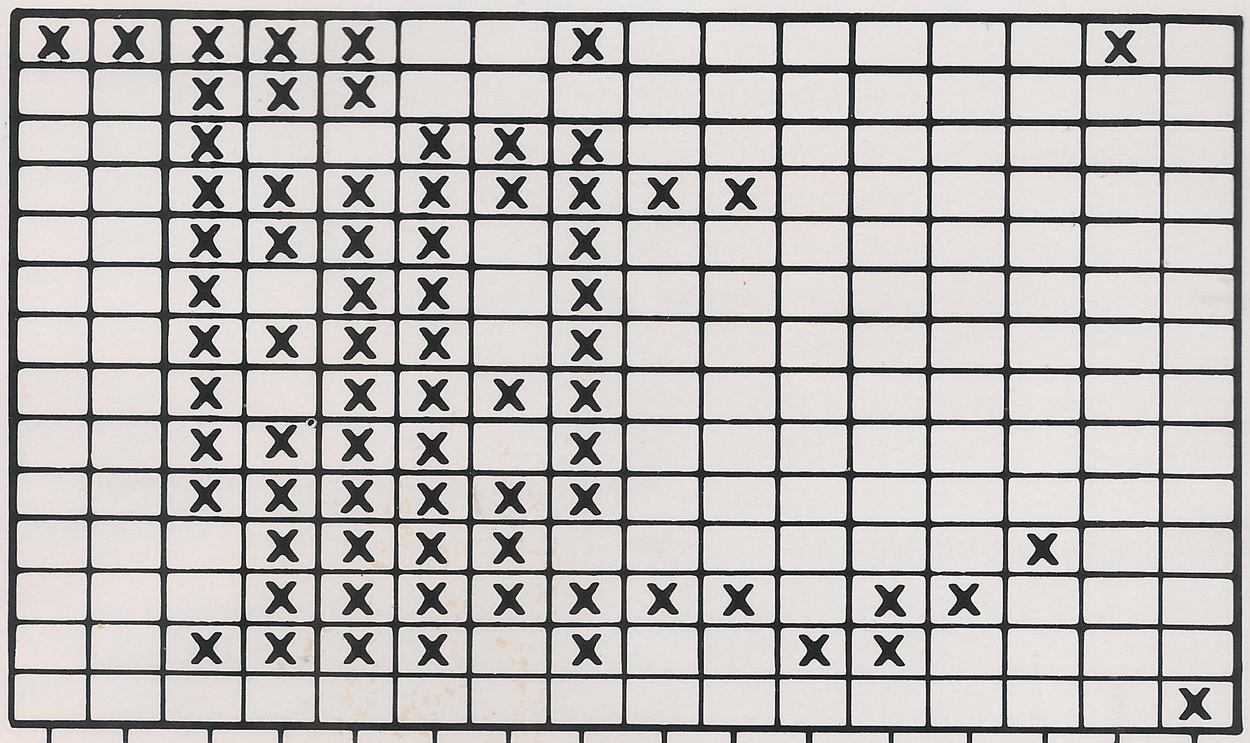

SOLUTIONS

Check if TV is plugged into AC outlet.

Check if *Power Key* is pressed.

Try a different channel, maybe station trouble.

Check antenna connections on back of set.

Check antenna for broken wires.

Reorient antenna.

Probably local interference, such as an appliance.

Adjust *Fine Tuning.*

Adjust *Bright Control.*

Adjust *Cont Control.*

Check if station is broadcasting in color.

Adjust *Color Control.*

Adjust *Tint Control.*

Adjust *V-Hold Control.*

Check if *TV/Monitor Switch* is in proper position.

Check batteries in transmitter.

VERTICAL INSTABILITY

When the picture shows vertical instability (moving up or down on the screen), adjust the *V-Hold Control* (vertical hold) until there is a single image without vertical movement. The *V-Hold Control* is located in the hide-away controls compartment.

VERTICAL INSTABILITY

VIDEO AND AUDIO CONNECTIONS

VIDEO AND AUDIO INPUT

Input jacks for external video and audio signals are provided on the back of your television. They will allow you to connect such equipment as a VCR, video disc player, video games, video cameras, etc. The *TV/Monitor Switch* will permit you to switch from the normal television signal to an external signal. To receive the external signal, place the switch in the "Monitor" position. All the television controls (both picture and volume controls) will adjust the picture and sound that you receive from your external equipment. As a result of this switching capability, it is not necessary to disconnect or turn off the external equipment when you wish to receive the regular television signal — just switch to "TV."

INPUT SPECIFICATIONS:

Video ..... 1 Volt peak to peak, 75 Ohm.
Audio ..... 500mV RMS, high impedance.

VIDEO AND AUDIO OUTPUT

Output jacks are provided to permit you to connect the video and audio signals from your television to a video cassette recorder. The *TV/Monitor Switch* must be in the "TV" position to permit the recording of the television signal.

OUTPUT SPECIFICATIONS:

Video ..... 1 Volt peak to peak, 75 Ohm.
Audio ..... 500mV RMS, high impedance.

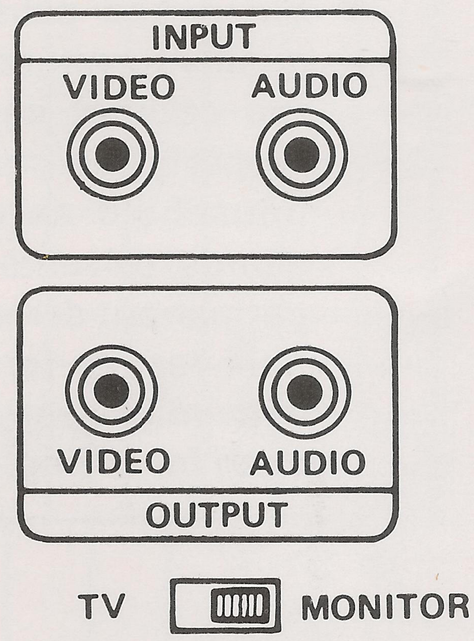

EARPHONE CONNECTION

An *earphone connection* located on the front lower left corner of the cabinet allows you to listen to the TV without disturbing others. Simply insert the plug of an earphone (not supplied) into the outlet on the front of the TV. This automatically disconnects the sound except to the earphone.

RECEPTION PROBLEMS

Reception problems when the television is first set up are usually caused by an antenna which is inadequate or not oriented in the best direction.

"Snow" or weak picture is caused by either a weak signal or a poor antenna.

"Interference" may be caused by electrical appliances, auto ignition, etc. Interference of this type is normally temporary.

"Ghosts" or multiple images can be caused by reflections of signals from mountains or high buildings.

SNOW

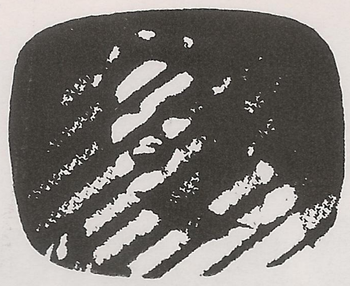

INTERFERENCE

GHOSTS

REMOTE CONTROL OPERATION

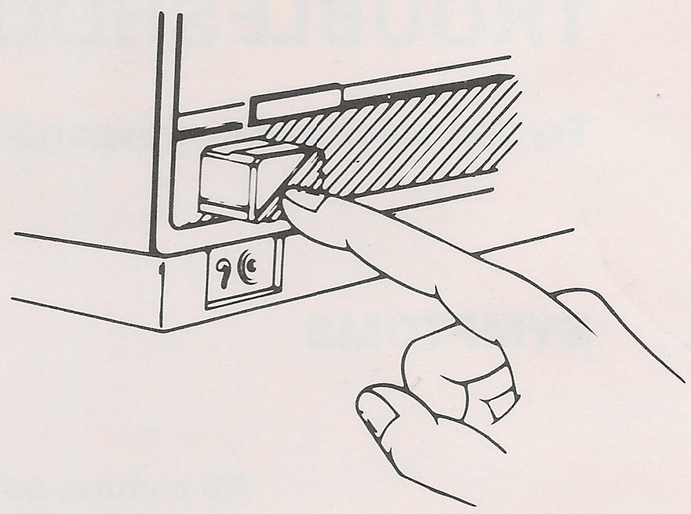

The Remote Control Transmitter allows you to control the television from as far away as 25 to 30 feet. For best results, point the front of the Remote Transmitter unit toward the television. The controls on the Remote Transmitter operate the same as the main TV controls. In addition to these controls, the Remote Transmitter has *Channel Selection Keys,* an *Off Timer Key* and a *Mute Key.*

The Remote Control Transmitter may be stored in the compartment which is located on the front lower left corner of the TV. Insert the transmitter until it is flush with the front of the TV. To remove the transmitter, simply press and release the transmitter. (Refer to the illustration — top right.)

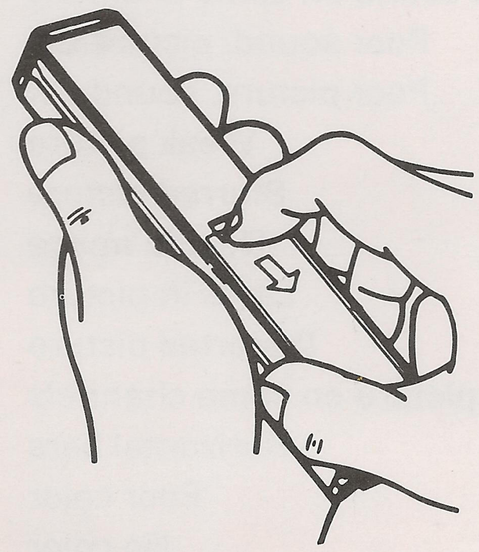

BATTERY INSTALLATION

The power for the Remote Control Transmitter is supplied by two "AAA" 1.5 volt batteries.

- To install the batteries, open the Remote Transmitter by sliding the battery compartment cover open as indicated on the back of the transmitter. (See illustration at right.)
- Install the two "AAA" volt batteries so the "+" and "–" marks on the batteries match the "+" and "–" marks inside the unit. Replace the back cover.
- Remove the batteries from the Remote Control Transmitter if it is not going to be used for a month or more. *Discharged batteries may leak and damage the unit.* The normal life of the batteries should be from five to six months.

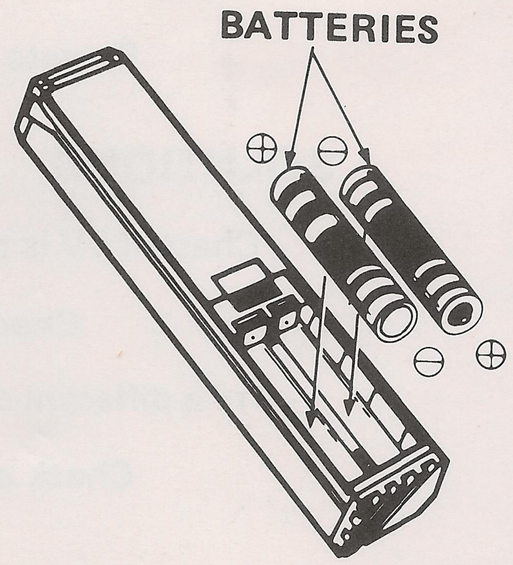

CHANNEL SELECTION KEYS

Twelve *Channel Selection Keys* are provided to allow you to directly select your desired channel without having to scan through the undesired channels. If you have rearranged your channels, you can use the letter identification A - L. Locate the letter below the desired channel position on the TV and press the *Channel Selection Key* (on the transmitter) with the same letter beside it. For example: If you wish to select the third channel from the left (C), you would press the *Channel Selection Key* with C beside it.

OFF TIMER KEY

The *Off Timer Key* is provided to allow you to set the television to turn off automatically after sixty minutes (one hour). To set the Timer, press the *Off Timer Key* once. While the Timer is set, the *Indicator Light* on the TV will be lit. To cancel the Timer, press the *Off Timer Key* again and the *Indicator Light* will be off.

MUTE KEY

Press the *Mute Key* to instantly eliminate the sound without affecting the picture. Press the *Mute Key* again and the volume will return to its previous level.

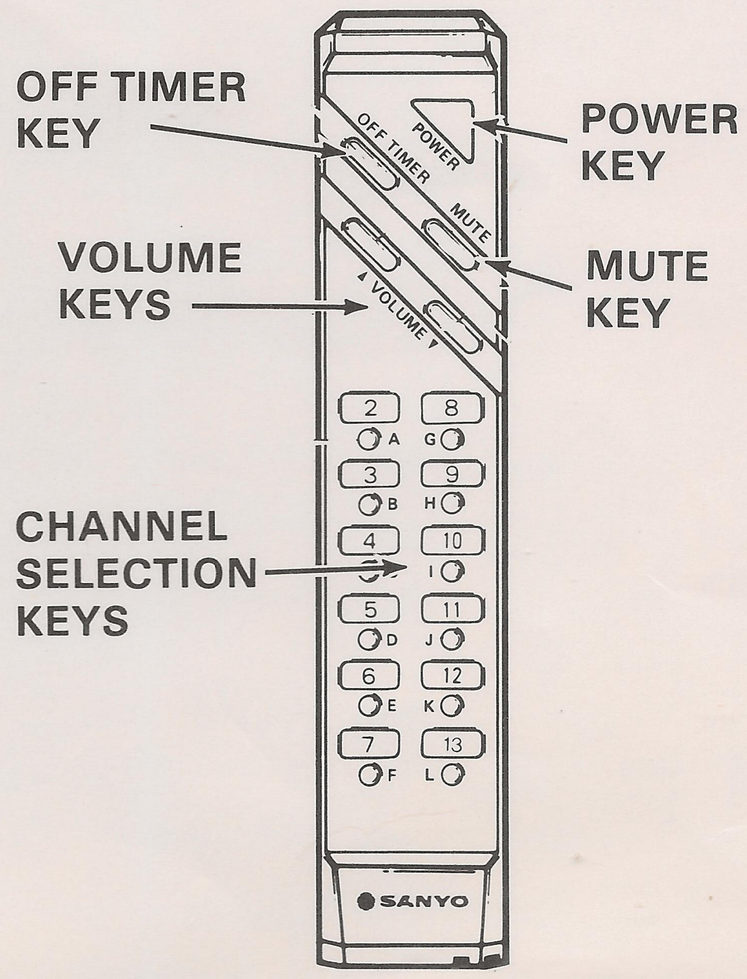

MAINTENANCE AND SERVICE

WARNING: Unplug the power cord before cleaning the television

- Clean the screen and trim with a soft cloth dampened with a solution of mild detergent and warm water. Wipe dry and clean up any spills.

- Clean and polish the cabinet with a quality furniture polish. The surface of the cabinet can be damaged if not properly maintained. Many common household aerosol sprays, cleaning agents, solvents and polishes will cause permanent damage to the fine surface. Best results for cleaning are obtained with mild soap and water, and a soft cloth for drying.

WARNING: High voltages are used to operate television receivers. Do not remove the back from your set.

Sanyo Service is easily obtained. If after following all operating instructions, you find that service is necessary, contact the nearest Sanyo Office or the Store where you purchased the unit. Give the model number and explain the difficulty. We will advise you how to obtain service.

This symbol on the nameplate means the product is Listed by Underwriters' Laboratories Inc. It is designed and manufactured to meet rigid U.L. safety standards against X-radiation, fire, casualty and electrical hazards.

This color television conforms to all applicable performance standards prescribed under the RADIATION CONTROL FOR HEALTH AND SAFETY ACT of 1968.

SANYO ELECTRIC INC.

1200 W. Artesia Blvd., P.O. Box 5177, Compton, CA 90220

Printed in U.S.A. WB 8-83

Part No. 3P01033 (A2KCS)